



We reserve the right for any inaccuracies and the right to make changes. The sketches are for guidance only.

B. **Lines** of light


Assembly sketches

B. Lines of light

Different ways of installing **lines** of light


B1. Installation in flat ceilings - recessed

T-profile recessed in flat ceiling, screwed into batten behind. The profile is pre-drilled with countersinking by an electrician, alternatively mounted with clips. Reinforce with battens beside and behind the profiles to stabilise plasterboard.

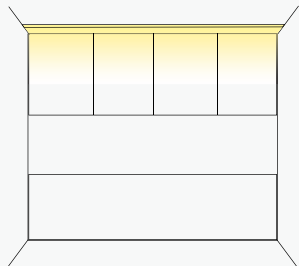


Recommended profiles and covers:

Maxi T

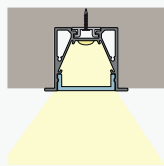

Cover Opal/
Prism

T

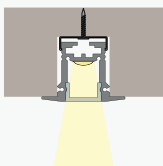


Cover Opal/
Prism




B2. Installation in sloping ceiling - recessed

T-profile recessed in sloping ceiling, screwed into batten behind. The profile is pre-drilled with countersinking by an electrician, alternatively mounted with clips. Reinforce with battens beside and behind the profiles to stabilise plasterboard.

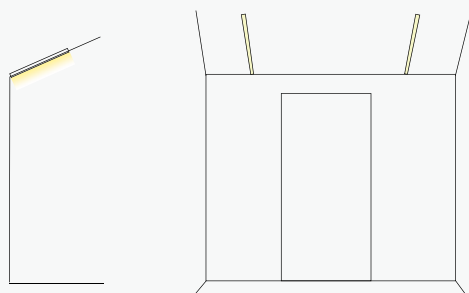


Recommended profiles and covers:

Maxi T

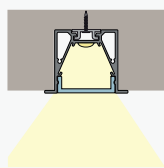

Cover Opal/
Prism

T

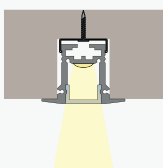

Cover Opal




B. Lines of light

Different ways of installing **lines** of light


B3. Installation in wall - recessed

T-profile recessed in wall, screwed into batten behind. The profile is pre-drilled with countersinking by an electrician, alternatively mounted with clips. Reinforce with battens beside and behind the profiles to stabilise plasterboard

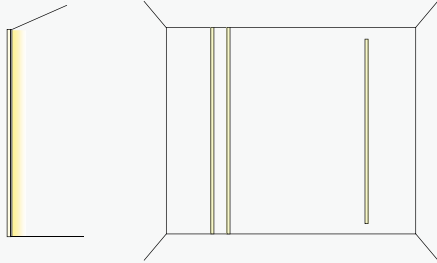


Recommended profiles and covers:

Maxi T

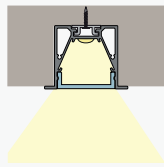


Cover Opal/
Prism

T

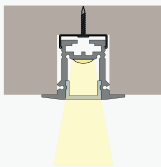


Cover Opal

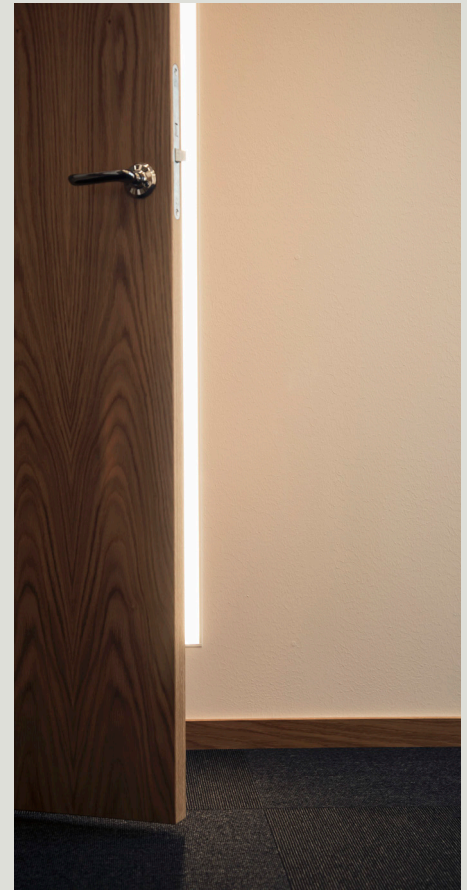

B4. Installation in panel ceiling (semi-recessed)


Profile with cover opal high installed between panel and ceiling, screwed into batten behind. The profile is pre-drilled with countersinking by an electrician, alternatively mounted with clips.

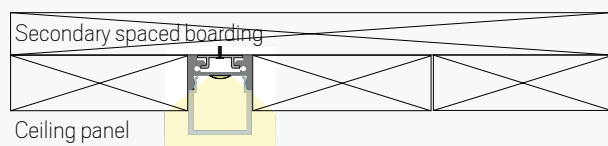

The cover is a little lower than the ceiling panel level so that it illuminates the ceiling. It is important that the profile is concealed by the ceiling panel.


Recommended profiles and covers:

Lean

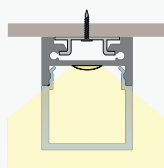


Cover High Opal

U high

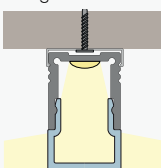

Cover High Opal

U low

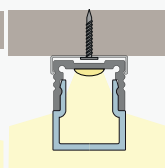

Cover High Opal



B. Lines of light

Different ways of installing **lines** of light

B5. Installation in ceiling close to wall, between two walls


Profile installed up against wall. Length is equal to the length of the wall. Can replace supporting profile along the wall if acoustic ceiling is used.

NB! This profile has no end caps. Must be installed between two walls.




Recommended profiles and covers:

Hidden


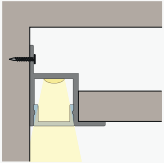


Cover Opal

Hidden


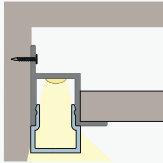


Cover High Opal

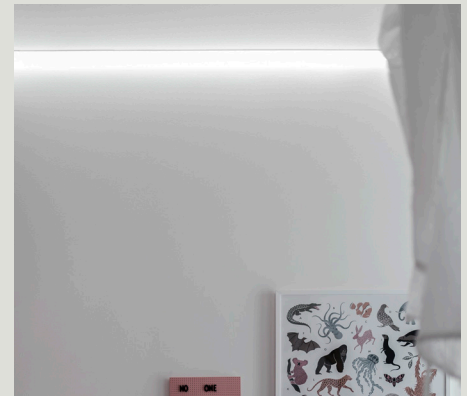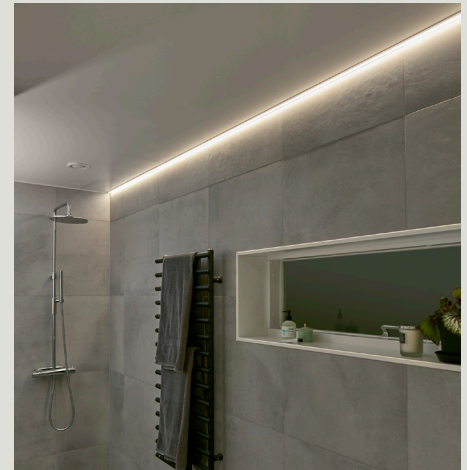


B6. Installation in window recess.

T- or U- profile installed in grooved track in window recess. T-profile Art Thin is pressed into the grooved track. The U-profile is pre-drilled with countersinking by an electrician, alternatively mounted with clips.

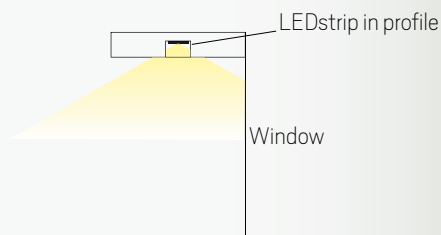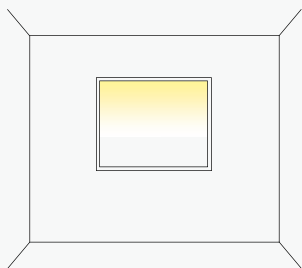


Recommended profiles and covers:

Art Thin


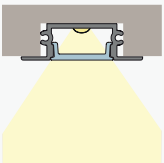


Cover Opal

Art Low

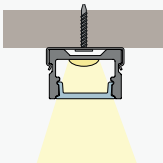

Cover Opal

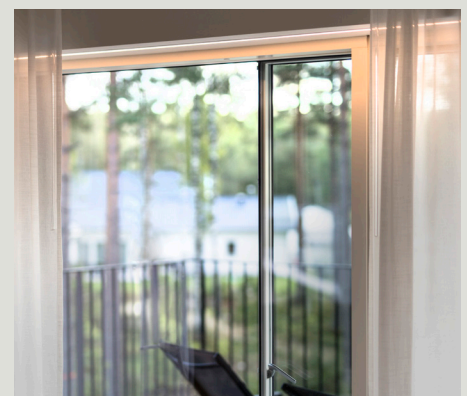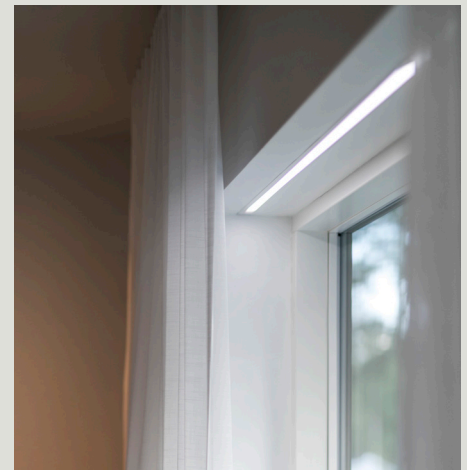

See overview table with profiles, LED strips and covers here:

